


Date: December 2nd 2020

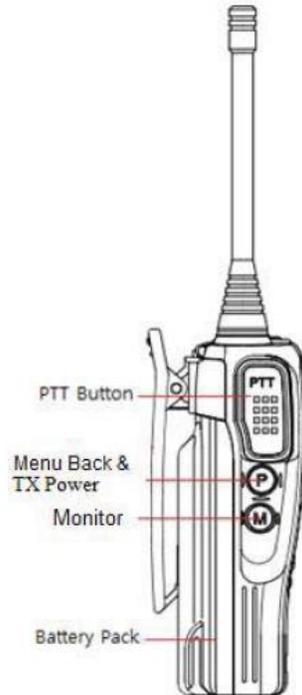

MP-4000 Display Programming Instructions

1. Install a charged battery onto the radio.
2. To place the radio into programming mode, press and hold the "P" button on the side of the radio and turn the radio on.
3. Release the "P" button and the display should show "Program Mode".
4. Connect the programming cable to the computer and plug the other end into the radio.
5. Run the programmer and select the correct port number. Port information can be found on your computer's Device Manager.
6. Read the radio and save the file for future reference.
7. You can also create a new file by clicking on the white paper icon on the left side of the programmer.
8. Write the new file to the radio and save it to your hard drive.

Please call us at 1-800-456-2071 if you have any questions.