


X1Slim Wireless PTT

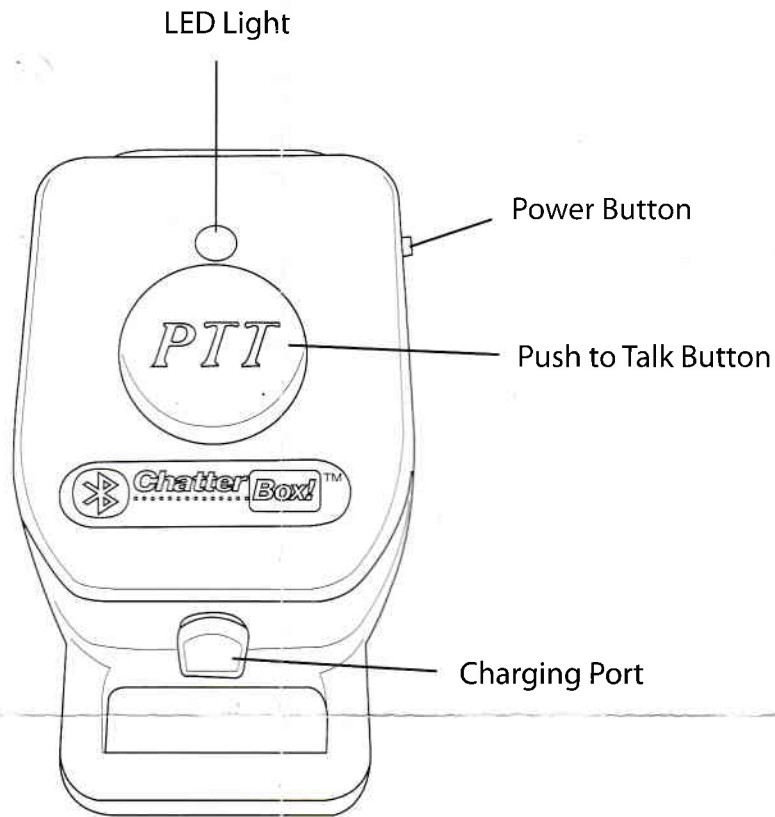

Powering ON wireless PTT button: Press and hold POWER button for 2-3 seconds until Blue LED light illuminates

Powering OFF wireless PTT button: Press and hold POWER button for 2-3 seconds until Red LED light illuminates

Instructions for pairing wireless PTT to X1 SLIM:

- 1) Place PTT button in pairing mode: From the OFF position push and hold the POWER button until the Blue LED flashes rapidly
- 2) Place X1 SLIM in PTT pairing mode: From the OFF position push and hold PTT button while turning on the unit (turn vox knob). You will notice the LCD display will read "PT rd" and the Bluetooth logo will blink rapidly. The X1 SLIM is now in PTT pairing mode.
- 3) Allow 5-10 seconds for X1 SLIM and PTT to pair. When X1 SLIM and PTT button are successfully paired the Blue LED on the PTT button and X1 SLIM will blink in 1 second increments.
- 4) To complete pairing process you must turn off BOTH PTT button and X1 slim.

* From this point forward both the PTT button and X1 SLIM will automatically pair when turned on. You must always turn the X1 SLIM on FIRST before turning on the Wireless PTT button.