


MDM-4000 / TM-8000 INSTALLATION INTO TB-EPS BASE CABINET



1. Unscrew 4 screws on both sides of the outside (8 total) of the TB-EPS so you can take off the cover from the top.




2. Take cover off

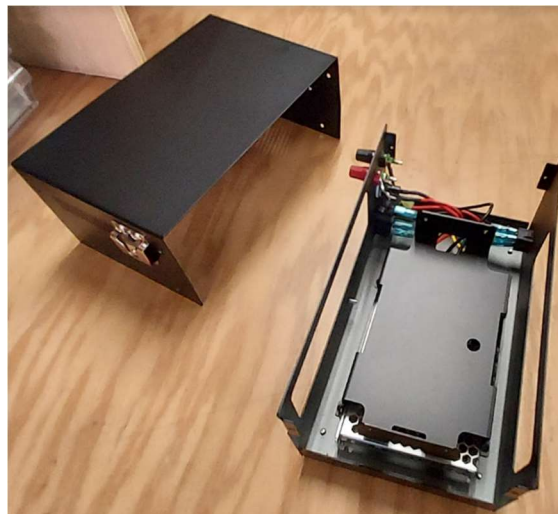

3. Slide mobile radio in through the back slot and line up the mounting screws on each side.



4. Wiggle the mobile radio's red/black power cable underneath the mobile and over inside to the side where the red/black TB-EPS power cable is located so you can plug them together (circled green).

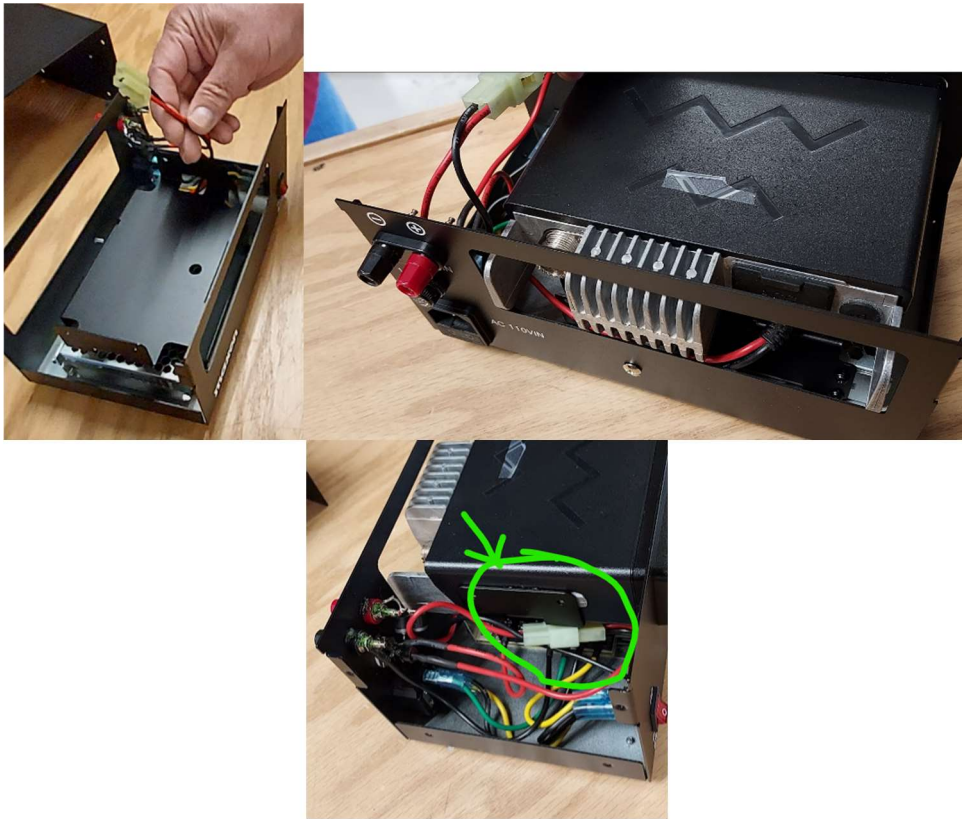

5. The cover of the TB-EPS has two notches on the inside that should be lined up with the radio inside the cabinet when the cover is closed so that they are not visible when the cover is reattached. This will also help you line up the screws on the outside.



6. Put the cover back on and tighten all 8 screws on the outside of the cover. The vent grill area goes towards the back, w/ the mic hanger on the left-hand side when looking at the front of the radio.

